



Raptor Guard™ “X” perching deterrents

RGSO-series, RGVT-series, RGFL-series

Super strap installation



Supplies

- Slip-on Raptor Guard™ (RGSO-36 featured here)
- Super strap banding, buckles and tightening tool (not included)

Instructions



Position raptor guard with 5” of air gap clearance between the edge of the raptor guard and edge of the insulator.



Wrap straps around the saddles (between the bolts) and tighten by hand.



Use the super strap tightening tool to tighten each strap.



Cut the tails off of each strap.