

CUTOUT COVER

HOTSTICK INSTALLATION



SUPPLIES

- Line hose, LH-038-3M, featured here
- Hotstickable line hose tool, LTH-038, featured here (not included)



CT-D01

INSTRUCTIONS



Insert the clips over the ribs of the cutout cover. Position option #1 fits cutouts with a galvanized channel >0.6".




Adjust the clips to fit as needed for your application.




Hook hotstick.




Lock hotstick.

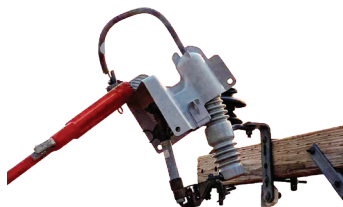


Position cutout cover over the cutout. Slide it forward over the stinger wire until it fully enclosed by the cutout cover and protruding from the hole in the top.

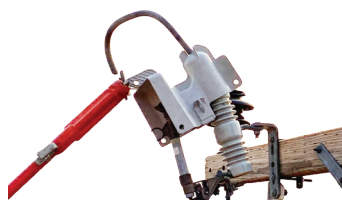

Pull the hotstick down and back to snap the cutout cover into position.

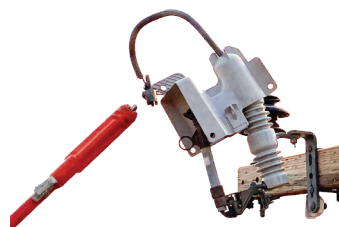

Unlock hotstick.

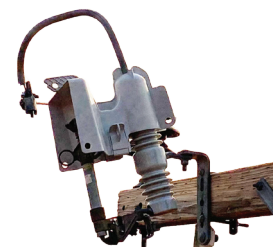

Assembly is complete.

VIDEO TUTORIAL

Scan the QR code to see a quick video of a live install >

Or visit powerlinesentry.com/install-support for a full library of support materials.



TRUE POWER RELIABILITY DEMANDS EFFECTIVE WILDLIFE PROTECTION
POWERLINESENTRY.COM | INFO@POWERLINESENTRY.COM | 970.599.1050