

RIGID CONDUCTOR COVER

HOTSTICK INSTALLATION



SUPPLIES

- Conductor Cover, CC-STT-CF featured here
- Conductor Cover Hotstick Install Tool, CC-AT featured here (not included)



CC-STT-CF



CC-AT

INSTRUCTIONS



Snap the hotstick installation tool tight onto the sleeve of the conductor cover approximately 12 inches from the cap. With the insulator cover held by the installation tool, extend the complete unit over the insulator and in-line with the conductor.



Once the full length of the flared bottom edge of the conductor sleeve is aligned with the conductor, snap the sleeve onto the conductor by pulling down. Repeat the process along the full length of the sleeve until the entire length of the sleeve is in place and encompasses the conductor.



Use the pointed tip of the installation tool to set the flared bottom of the sleeve on top of the conductor cover and repeat the process of snapping the conductor sleeve down over the line.




Once the sleeve is completely in place on both sides of the pole, insure that the insulator cap is also pulled down tight over the insulator.

VIDEO TUTORIAL

Scan the QR code to see a quick video of a live install >

Or visit powerlinesentry.com/install-support for a full library of support materials.

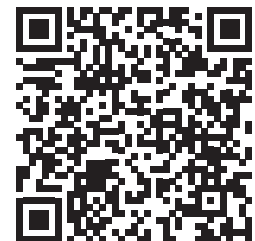

TRUE POWER RELIABILITY DEMANDS EFFECTIVE WILDLIFE PROTECTION
[POWERLINESENTRY.COM](https://powerlinesentry.com) | [INFO@POWERLINESENTRY.COM](mailto:info@powerlinesentry.com) | 970.599.1050