



Universal cutout cover

CT-D02

Hotstick installation



Supplies

- Universal cutout cover, CT-D02
- Hotstick (not included)

Instructions



Insert the clips over the ribs of the cutout cover. Position option #1 fits cutouts with a galvanized channel >0.6".



Adjust the clips to fit as needed for your application.




Hook hotstick.




Lock hotstick.



Position the cutout cover over the cutout. Slide it forward over the stinger wire until it is fully enclosed by the cutout cover and protruding from the hole in the top.

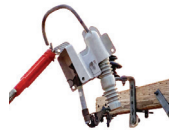

Pull the hotstick down and back to snap the cutout cover into position.

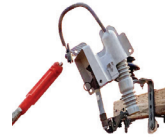

Unlock hotstick.



Assembly is completed.