

# Universal loadbreak cutout cover

CT-D04


## Hotstick installation



### Supplies

- Loadbreak cutout cover, CT-D04 featured here
- Hotstick, not included

### Instructions

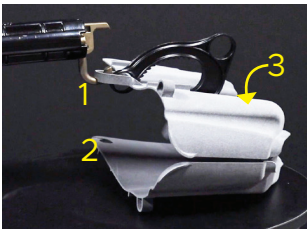

Hook the hotstick to the loadbreak cutout cover. There are 3 hotstick hook holes to choose from.



With the hotstick attached in the optimal position, place the cover over the loadbreak cutout and pull down so that it snaps snugly into place.



Remove the hotstick and re-hook it onto the Raptor Claw™ lock.



Pull in a downward motion so that the Raptor Claw™ locks tighten into position under the loadbreak.